

# Mirasys VMS Optex Integration Connector

January, 2015



## Mirasys Optex Connector

- Mirasys Video Management System has been integrated with the Optex PoE IP Encoder (PIE) supporting SIP series detectors and with Redwall Redscan detectors.
- Mirasys VMS supports receiving Optex detector messages through configurable text data channel (Universal Data Driver, a.k.a UDD).
- The integration is based on Optex event code messaging over the TCP/IP protocol.
  - The communication is 1-way from Optex to the VMS.
- Integration is provided using all the event codes.

## Mirasys PIE SIP Connector - Features

- The integration supports the following PIE (SIP) events:
  - **Far zone alarm** – FR sent from PIE.
  - **Near zone alarm** – NR sent from PIE.
  - **Creep zone alarm** – CR sent from PIE.
  - **Far and near zone alarm** – FN sent from PIE.
  - **Multiple alarm combinations** – XY (CR & NR), YZ (NR & FR), XZ (CR & FR or FN) sent from PIE.
  - **Tamper alarm** – TA sent from PIE.
  - **Trouble alarm** – TR sent from PIE.
  - **Alarm clearing** – CL sent from PIE.


## Mirasys Redwall Redscan Connector – 4 zones

- The integration supports the following events:
  - **Zone alarm** – A1, A2, B1, B2 event sent from detector.
  - **Multiple alarm combinations** – AA, ba, Ba, bA, BA, BB event sent from detector.
  - **Tamper alarm** – TA sent from detector.
  - **Trouble alarm** – TR sent from detector.
  - **Masking alarm** – AM sent from detector.
  - **Dirt alarm** – SO sent from detector.
  - **Severe weather condition alarm** – DQ sent from detector.
  - **Alarm clearing** – CL sent from detector.

## Mirasys Redwall Redscan Connector – 8 zones

- The integration supports the following events:
  - **Zone alarm** – A11, A12, A21, A22, B11, B12, B21, B22 event sent from detector.
  - **Multiple alarm combinations** – AA, ba, Ba, bA, BA, BB event sent from detector.
  - **Tamper alarm** – TA sent from detector.
  - **Trouble alarm** – TR sent from detector.
  - **Masking alarm** – AM sent from detector.
  - **Dirt alarm** – SO sent from detector.
  - **Severe weather condition alarm** – DQ sent from detector.
  - **Alarm clearing** – CL sent from detector.

# Mirasys Optex Connector

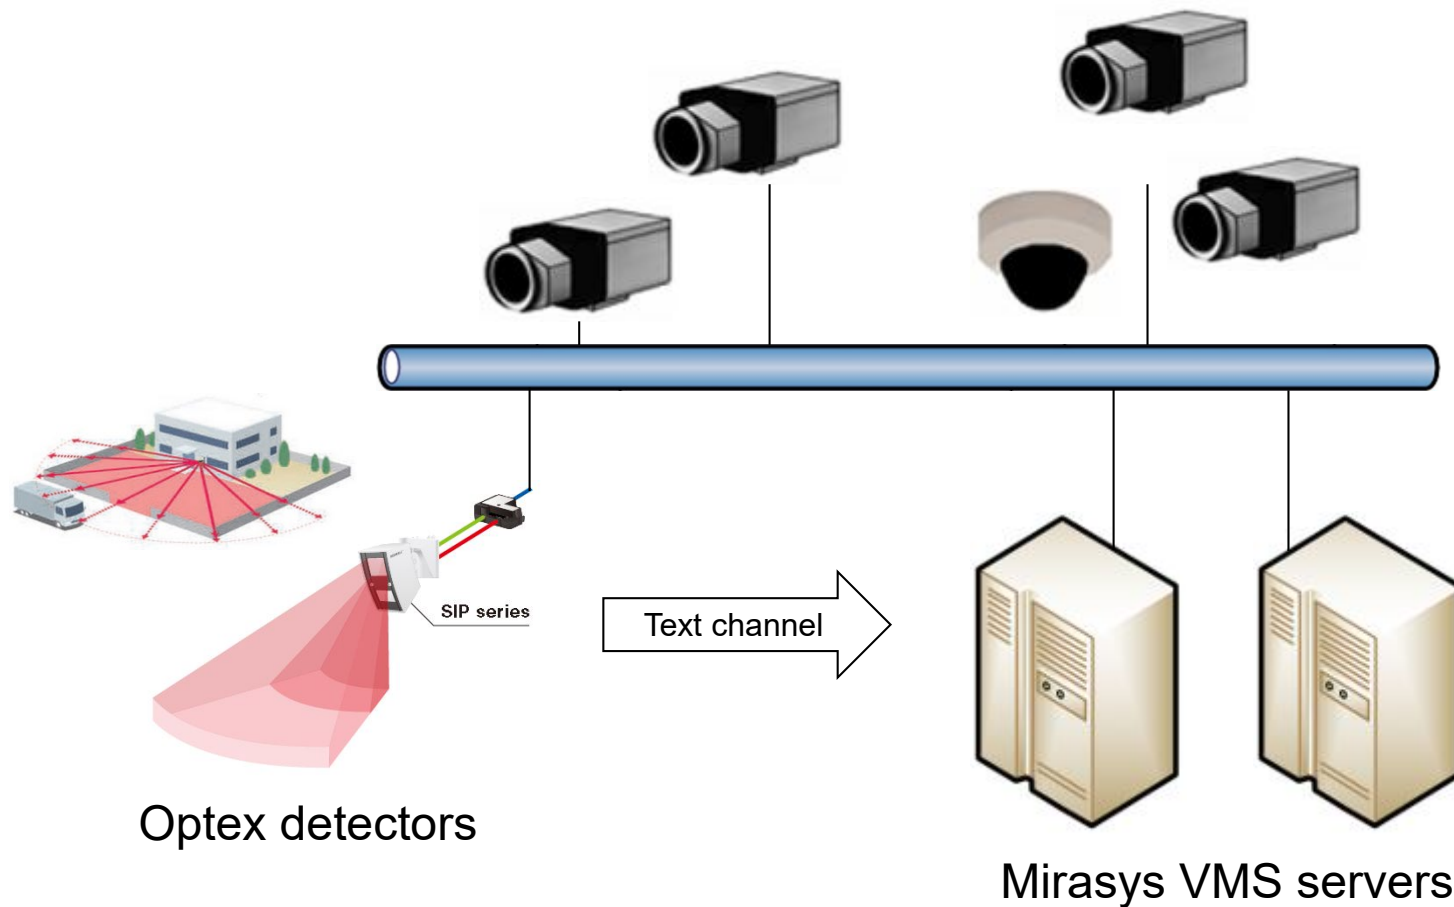

## Mirasys Optex Connector – Use Case

- Event messages the alarm panel is sending can be used to trigger Mirasys VMS alarm action.
- Alarms are configured like any VMS alarm using System Manager,
- Alarm action(s) can be any of the below or a combination
  - Opening camera(s) in pop-up window and start recording video/audio,
  - Turn PTZ camera(s) or start tour,
  - Send email to selected recipient(s),
  - Trigger digital I/O output,
- Like any VMS alarm, also detector initiated alarms are logged into the alarm database and can be reported later using Mirasys Reporting Tool.